
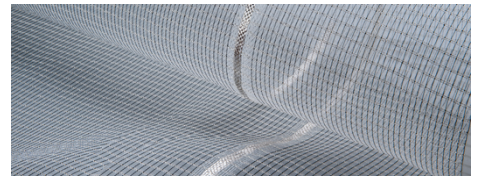


SEFAR PowerHeat

The SEFAR PowerHeat fabric consists of polymers, copper strands and electrically conductive yarns and is ideally suited for applications in the automotive industry, healthcare and home textiles due to its integration versatility.

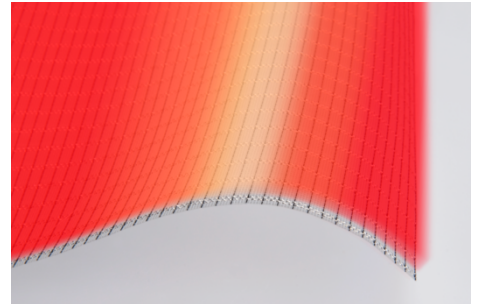

Product features

SEFAR PowerHeat – Heating fabric

The PowerHeat heating fabric is flexible, efficient and can be integrated into most production processes.

PowerHeat brings you versatile benefits:

- Highest energy efficiency
- Light and thin
- 3D mouldable
- Safe - no hotspots
- Robust
- Process integration: injection, foaming, laminating, gluing in
- Free shaping and any cutting to size
- Various voltage and power ranges (up to 50V AC / 120V DC and up to 2000W/m²)
- Very fast heating time
- First class value appeal
- Translucent
- Isolated as required
- High air permeability
- Partly self-regulating thanks to PTC characteristic

DOWNLOADS

Broschüre: SEFAR PowerHeat NT (PDF 4826 kb)

Flyer: SEFAR PowerHeat NT for Automotive Interior (PDF 231 kb)


Sefar Filter Pure (Pty) Ltd

Postnet Suite #242
 Private Bag X18
 North Riding, 2162
 South Africa


Phone +27 11 708 2485/6/7
 Fax -

shawn@sefarfilterpure.com


[Go to product page](#)




Free cut to size



Quick heating up




Continue to function, even if damaged




Easy integration through flexible fabric

SEFAR PowerHeat Fabric

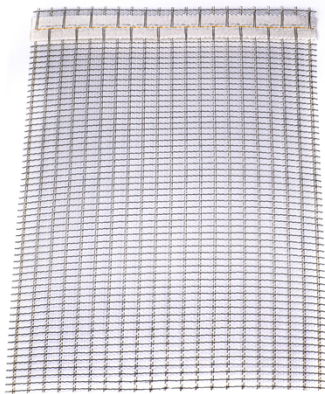

Normal view

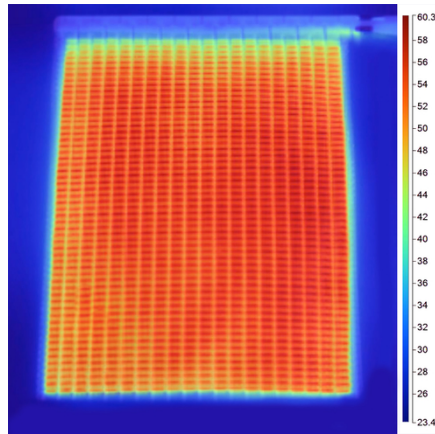

Infrared view

Area performance compared to operating voltage of selected SEFAR PowerHeat fabrics


Sefar Filter Pure (Pty) Ltd

Postnet Suite #242
Private Bag X18
North Riding, 2162
South Africa

Phone +27 11 708 2485/6/7
Fax -

shawn@sefarfilterpure.com



[Go to product page](#)

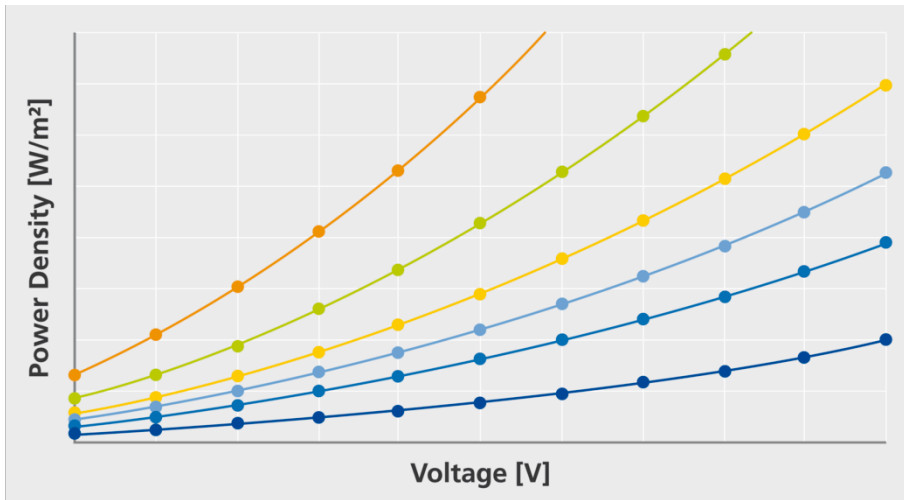

Power density vs. Power supply

We offer various area power ratings from 10 to over 1000W/m² at operating voltages up to 50V AC / 120 V DC.

Free shaping, back pulls can be heated with bridge electrode

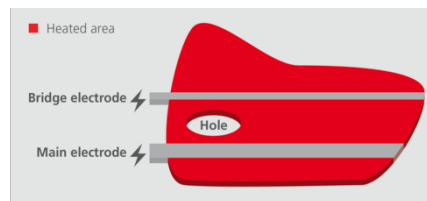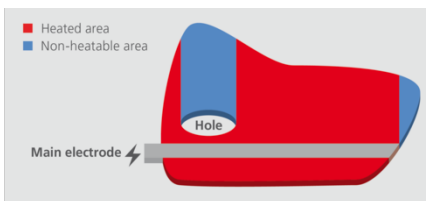

Presentation of a cut of the SEFAR PowerHeat fabric

Sefar Filter Pure (Pty) Ltd

Postnet Suite #242
 Private Bag X18
 North Riding, 2162
 South Africa

Phone +27 11 708 2485/6/7
 Fax -

shawn@sefarfilterpure.com

[Go to product page](#)

Applications


- Automotive interior
- Battery and fuel cell heating
- Personal well-being: pillows, blankets
- Hand tools
- De-icing
- Medicine
- Food and drink tempering
- Underfloor heating in mobile homes and caravans




Automotive Interior Heating



Warming armrest

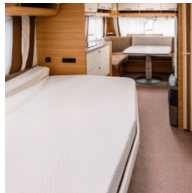

Underfloor heating in the caravan/ mobile home

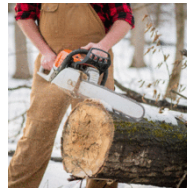

Heater chainsaw

The PowerHeat heating fabric from Sefar at a glance:

- Fast heat-up time, powerful

Sefar Filter Pure (Pty) Ltd

Postnet Suite #242
Private Bag X18
North Riding, 2162
South Africa

Phone +27 11 708 2485/6/7
Fax -

shawn@sefarfilterpure.com

[Go to product page](#)

- Extremely homogeneous heat distribution
- Very good process integration
- 3D mouldable, any shape
- Secure

We offer various area power ratings from 10 to over 1000W/m² at operating voltages up to 50V AC / 120 V DC.

Locations



Sefar Filter Pure (Pty) Ltd

Postnet Suite #242
Private Bag X18
North Riding, 2162
South Africa
Phone: +27 11 708 2485/6/7
Fax: -

■ **E-Mail**

Sefar Filter Pure (Pty) Ltd

Postnet Suite #242
Private Bag X18
North Riding, 2162
South Africa

Phone +27 11 708 2485/6/7
Fax -

shawn@sefarfilterpure.com

[Go to product page](#)